

English

50  
10

# INTEX<sup>®</sup> OWNER'S MANUAL

QuickFill™ Mini Rechargeable Air Pump

Model AP637 5V --- 2A Rechargeable Battery

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT



## WARNING

- Adult use only.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not drop unit into water or expose unit to rain or water.
- Do not direct air stream at face or body.
- Do not operate for more than 10 minutes at a time. Unplug and let cool at least 10 minutes.
- Unplug unit when not in use.
- Do not insert objects into the inflation or deflation connector. Do not obstruct vent holes or open source.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.**


# SAVE THESE INSTRUCTIONS



# CAUTION

50  
IO

- To reduce the risk of electric shock, do not expose to rain. Store indoors.

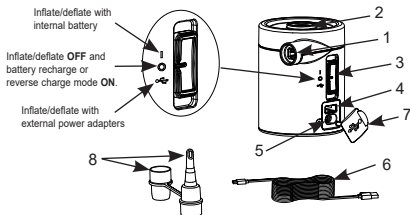

## PARTS DESCRIPTION:

1. INFLATION CONNECTOR
2. DEFLATION CONNECTOR
3. SWITCH
4. REVERSE CHARGE USB SOCKET (TYPE A)
5. USB SOCKET (TYPE C)
6. USB CABLE
7. SOCKET CAP
8. NOZZLES

**NOTE:** Drawings for illustration purpose only. May not reflect actual product. Not to scale.

## General


- The air pump requires an external power adapter (not included) to charge the battery and operate.
- Make sure the output of the external power adapter, such as USB Wall Charger, Portable USB Charger, 12V Car Charger or USB Port is rated 5V / 2A or more for optimum operation.
- It is recommended that the first charge to be 5.5 hours or overnight using a USB wall charger rated 5V / 2A or more.
- Maximum air flow: 200 (L/Min) / 7.1 (CFM) when is fully charged.
- **Reverse charge USB socket Type A output voltage / current rating:** 5V / 1.5A. Suitable for charging mobile devices such as smartphones and tablets.
- The pump is suitable for inflating items with an overall air volume not exceeding 1.6 m<sup>3</sup> / 55 ft<sup>3</sup>, such as inflatable beach balls, swim rings, tubes, ride-on aquatic toys, kids floats, baby pools, single or double users air mats or lounges, single height queen size air bed or camping mats.
- The batteries are permanently sealed in the pump and cannot be removed or replaced. As the pump weakens from use, recharge the batteries. Do not wait until they are fully discharged.
- Do not dispose of air pump and its batteries in fire. Check your local regulations for proper disposal instructions.
- The "O" position turns the pump OFF and is also the RECHARGE mode position.
- Keep away from heat or direct sunlight.
- No specific air pump maintenance is required. Air pump has no user serviceable parts.

# SAVE THESE INSTRUCTIONS

Page 2





## CHARGE/RECHARGE AND REVERSE CHARGE INSTRUCTIONS

1. Plug the small end of the USB cable into the small USB socket (Type C). See Fig (1).

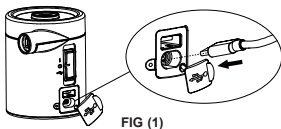


2. Connect the other end of the USB cable to one of the following external power adapters (not included):

 - USB Wall Charger rated 5V / 2A or more. See Fig (2).
- Portable USB Charger rated 5V / 2A or more. See Fig (3).
- 12V Car Charger rated 5V / 2A or more. See Fig (4).
- USB Port rated 5V / 2A or more. See Fig (5).

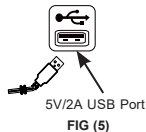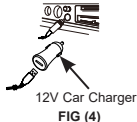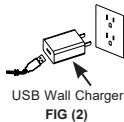

3. Slide the switch to "O" position to charge/recharge the batteries. See Fig (6). When the pump is fully charged, remove the USB cable. The indicator light turns red when is in charging mode and green when is fully charged.

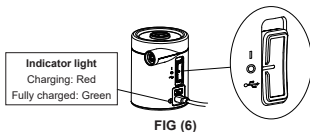

# SAVE THESE INSTRUCTIONS

4. **Reverse Charging:** ensure the pump battery is fully charged, remove the USB Type C cable from the pump and slide the switch to "O" position. Connect your mobile device USB Type A cable to the pump USB socket Type A and connect the other end of the cable to your mobile device. See Fig (7).

**NOTE:** The reverse charging function does not work while the pump battery is charging at the same time. Make sure the USB Type C socket is disconnected.

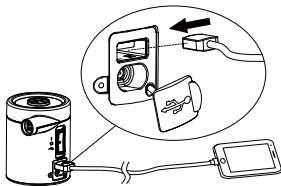



FIG (7)

## OPERATING INSTRUCTIONS


When inflating or deflating large items such as single or double users air mats or lounges, single height queen size air bed or camping mats, no accessory nozzle may be needed. The air pumps inflation connector may fit directly into the inflation valve. If a nozzle is needed, use the nozzle most appropriately sized for the product and follow below instructions.

### Inflation or deflation using internal fully charged battery (without external power adapters):

 1. Attach a suitable nozzle to the inflation or deflation connector if necessary and hold the pump against the inflation valve on the item to be inflated or deflated. See Fig (8).
2. Slide the switch to "I" position to operate the pump. See Fig (9). When the item is inflated or deflated to the desired level, slide the switch to "O" position to turn off the pump. See Fig (10).



INFLATION

 

DEFLATION

FIG (8)

 


FIG (9)

 


FIG (10)

# SAVE THESE INSTRUCTIONS

**Inflation or deflation using an external power adapter (not included):**


1. Attach a suitable nozzle to the inflation or deflation connector if necessary and hold the pump against the inflation valve on the item to be inflated or deflated. See Fig (8).
2. Plug the small end of the USB cable into the small USB socket (Type C). See Fig (11).
3. Connect the other end of the USB cable to one of the following external power adapters (not included). See Fig (2-5).
4. Slide the switch to "  " position to operate the pump. See Fig (12). When the item is inflated or deflated to the desired level, slide the switch to " O " position to turn off the pump. See Fig (13).



FIG (11)

 


FIG (12)

 



FIG (13)

**STORAGE INSTRUCTIONS**

1. Make sure the USB cable is free of twist, kink and knot. Fold the USB cable loosely, and return pump, USB cable and nozzles to package when not in use.
2. Always slide the switch to "  " position when the device is not in use or during long term storage in order to prevent damage to the battery.
3. To protect and extend the life of the battery, make sure the battery is charged before long term storage, and charge the battery every 3 months thereafter.

# SAVE THESE INSTRUCTIONS

## TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION
Air pump does not work	<ul style="list-style-type: none"> <li>• Pump running continuously for 30 minutes, motor protection system activated.</li> <li>• The battery power is too low.</li> </ul>	<ul style="list-style-type: none"> <li>• Switch off and disconnect the USB cable from the pump. Let the pump rest for 10 minutes before restarting.</li> <li>• Recharge the battery.</li> </ul>
Item not fully inflated after 6-7 minutes of inflation	<ul style="list-style-type: none"> <li>• Item to be inflated is too big.</li> <li>• Item inflation air valve not fully pushed open during inflation.</li> <li>• The external power adapter/ supply output amperage (A) is less than 2A.</li> </ul>	<ul style="list-style-type: none"> <li>• Use another air pump with a larger air flow capacity.</li> <li>• Use the pointed nozzle to fully push open the air valve during inflation.</li> <li>• Make sure the output of the external power adapter, such as USB Wall Charger, Portable USB Charger, 12V Car Charger or USB Port is rated 5V / 2A or more.</li> </ul>

**INTEX**<sup>®</sup> ©2023 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.  
 ®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/a/an Intex Development Co. Ltd., Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., Ettenseweg 46, 4706 PB Roosendaal - The Netherlands  
 • Distributed in the UK by Unisex Service (UK) Limited, 21 Holborn Viaduct, London EC1A 2DY, UK. [www.intexcorp.com](http://www.intexcorp.com)

# SAVE THESE INSTRUCTIONS